
WILLOUGHBY INDUSTRIES_ WBF-1RFM

INSTALLATION INSTRUCTIONS

- 1.) Install service shut-off valve in water supply line (valve not supplied).
- 2.) Install the bottle filler using the supplied z-clip and bottom mounting holes. Make sure that the positioned fixture is level side to side, to ensure proper draining. Adjust as necessary, then fully tighten the screws to secure the fixture (mounting hardware not supplied).
- 3.) Flush the water supply line with clean drinking water before making final connections to the 1/2" F.I.P. bottle filler valve supply.
- 4.) Connect the drain to drainage system. The drain is 1-1/2" F.I.P. and is to be connected to a P-trap (P-trap not supplied).
- 5.) Turn on water supply and check both the water supply lines and drain lines for leaks.

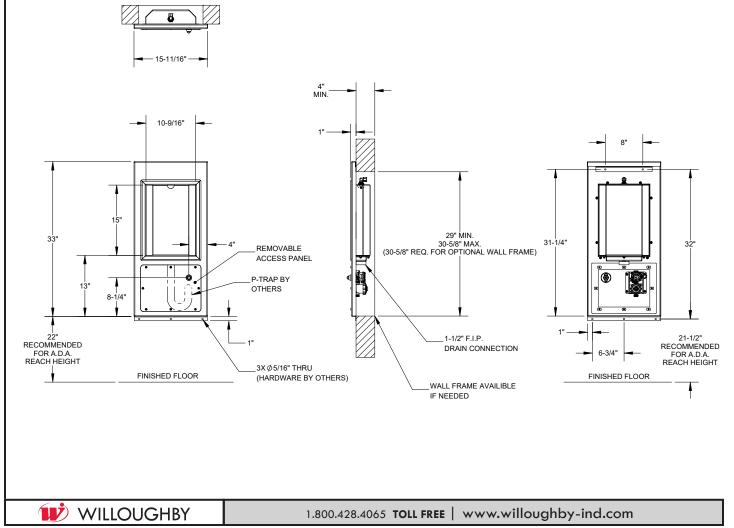

© Rev. 11/2024