


## ADA Compliant Front Access Roll-In Cabinet Shower

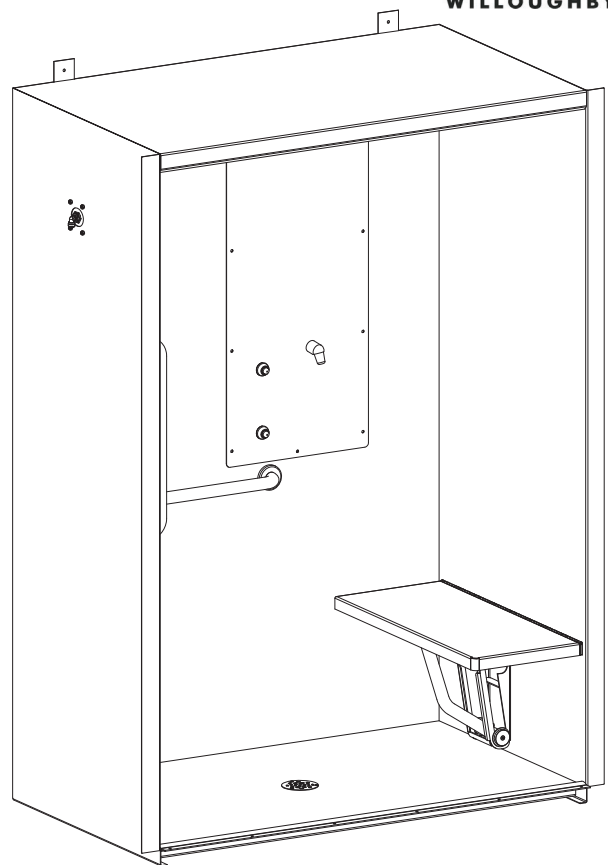

Please provide shower finish schedule upon ordering.  
(Unit may be shown with optional features)

### Recommended Specifications

Roll-In Front Access Handicap Cabinet Shower shall be:  
Willoughby Model No.      **S-3660-HC-FA**  
(Select from model number and options list on next page)

Shower cabinet shall be fabricated from 14 GA., Type 304 stainless steel. Shower floor shall be fabricated from 11 GA., Type 304 stainless steel. The construction shall be **all-welded** (unitized models only, not applicable to knockdown models), exposed stainless surfaces polished to a #4 satin finish, except shower floor which shall have a non-slip glass blast finish.

Standard equipment shall include:

- (ICD) Inside caulk drain (2") with removable strainer
- (GB24) 24" Horizontally-mounted grab bar
- (GB30) 30" Horizontally-mounted grab bar
- (GB24V) 24" Vertically-mounted grab bar
- (FSS) Fold-up stainless steel shower seat
- 1/2" ADA Threshold with anchor holes

Unit requires no chase area for installation and maintenance. Shower valve and shower head shall be mounted on removable access panel secured with security screws.

Underside of shower floor shall be sound deadened with fire resistant material.

Unit requires 2" recess in floor.

Optional WaterSense Labeled ligature-resistant shower head available (LRSH).

To specify fixture and accessories, use the Model Number and Options page.

Example: To specify a unitized 36" x 60" Roll-In Front Access Handicap Cabinet Shower with ADA-Compliant Right hand back wall shower head/push button/valving, polished front, single temp. pneumatic metering valves, standard ligature-resistant pneumatic push buttons, 2.5 GPM flow rate, two non-adjustable penal shower heads, and standard inside caulk drain

Use the following Willoughby Model Number:

**US-3660-HC-FA-R-A4-PML1-MA2-PBH-2.5GPM-NPS-2HD-ICD**

The location of the showerhead within the cabinet shower could result in potential water spray outside of the shower compartment. It is highly recommended that a floor drain be utilized at or near the shower entrance. The floor drain is to be provided by others.

Fixture shall be free-standing, no anchoring required.

**To specify Knockdown Cabinet Shower:** Select the "KS" model number from the list on the Model Number and Options page.

**\*\*NOTE:** US/KS-3660-HC-FA is in compliance with ADA 2010 standards when equipped with valve controls mounted on the Back Wall of the fixture, adjacent to the Fold-up Shower Seat. (Contact your Willoughby representative for further details.)



**WARNING:** Cancer and Reproductive Harm

- [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



MADE IN THE U.S.A.

visit our website at [www.willoughby-ind.com](http://www.willoughby-ind.com)  
5105 West 78th Street • Indianapolis, IN. 46268  
(317) 875-0830 • Fax: (317) 875-0837 • (800) 428-4065

